

## (950-8302) CRAWL SPACE VENTILATOR T-STAT REPLACEMENT KIT

## **A** WARNING

Rev. 10/06

Disconnect power or unplug 115 VAC power cord before servicing the Crawl Space Ventilator.

- 1. Remove Crawl Space Ventilator from wall. IMPORTANT: Note setting of dehumidistat (if equipped) so it can be reset when finished. Remove BLACK T-stat leads.
- 2. Use caution and drill out (2) T-stat rivets from exterior mounting plate with a 5/32" drill bit, (See Diagram A).
- 3. Insert (2) 6-32 x 1/4" studs through mounting plate and T-stat and tighten keps nuts. Replace BLACK T-stat leads.
- 4. Reinstall Crawl Space Ventilator in opening.

**Model V1 Shown** Drill out (2) T-stat rivets on exterior

5/32" drill bit.

mounting plate with

DIAGRAM A

**EXTERIOR VIEW** 

P/N 8504132

5. Reestablish 115 VAC power and cycle Crawl Space Ventilator "on" to verify proper operation. Reset dehumidistat (if equipped). NOTE: If outside temperature is below 50°F, T-stat may not allow Ventilator to turn on.

Copyright © 2006, Tjernlund Products, Inc. All rights reserved.