



TJERNLUND PRODUCTS, INC.

1601 Ninth Street • White Bear Lake, MN 55110-6794
PHONE (800) 255-4208 • (651) 426-2993 • FAX (651) 426-9547
Visit our web site • www.tjernlund.com

REV. A 5/99

MODEL MAC-3



MULTIPLE APPLIANCE CONTROL

**For Interlocking one Power Venter, Draft Inducer
IN-FORCER™ or Damper with up to three burners**

TABLE OF CONTENTS

Cautions	1
Electrical Wiring	
Electrical Specifications & Circuit Board Features	1
Output Power Venter, Draft Inducer, IN-FORCER & Damper Wiring Diagrams	2, 3
Burner Input Wiring Diagrams	4, 5
Alternative Wiring Diagrams	5, 6
MAC-3 Wired With up to Five Gas Burners and One Power Venter, Draft Inducer or IN-FORCER.....	5
MAC-3 Wired With a Power Venter or Draft Inducer and a Commercial IN-FORCER	6
MAC-3 Circuit Board Schematic	6
Replacement Parts & Warranty.....	7

DESCRIPTION

The MAC-3 is used for wiring up to 3 heating appliances with a single Draft Inducer, Power Venter, IN-FORCER or 115V Damper. It is suitable for both 24 VAC and 115 VAC control systems for gas and oil burners. Plug-in relays must be purchased separately depending on control system voltage of appliance.

Use Tjernlund part # 950-1040 relay For 24 VAC control systems.
Use Tjernlund part # 950-0480 relay For 115 VAC control systems.

OWNER INSTRUCTIONS, DO NOT DESTROY

 Recognize this symbol as an indication of important Safety Information!

WARNING

THESE INSTRUCTIONS ARE INTENDED AS AN AID TO QUALIFIED, LICENSED SERVICE PERSONNEL FOR PROPER INSTALLATION, ADJUSTMENT AND OPERATION OF THIS UNIT. READ THESE INSTRUCTIONS THOROUGHLY BEFORE ATTEMPTING INSTALLATION OR OPERATION. FAILURE TO FOLLOW THESE INSTRUCTIONS MAY RESULT IN IMPROPER INSTALLATION, ADJUSTMENT, SERVICE OR MAINTENANCE POSSIBLY RESULTING IN FIRE, ELECTRICAL SHOCK, CARBON MONOXIDE POISONING, EXPLOSION, OR PERSONAL INJURY OR PROPERTY DAMAGE.

**PLEASE READ CAREFULLY AND KEEP ON JOB
SITE FOR FUTURE REFERENCE.**

CAUTIONS

⚠ WARNING

1. Failure to install, maintain and/or operate the MAC-3 in accordance with manufacturer's instructions may result in conditions that can produce bodily injury and property damage.
2. The safety interlock and system operation performance checks must be performed on each appliance interlocked with the MAC-3 in accordance with the Power Venter, Draft Inducer, IN-FORCER or Damper installation instructions.

ELECTRICAL

⚠ WARNING

All wiring from the MAC-3 to the appliance must be appropriate Class 1 wiring as follows: installed in rigid metal conduit, intermediate conduit, rigid non-metallic conduit, electrical metallic tubing, Type MI Cable, Type MC Cable or be otherwise suitably protected from physical damage. The disconnect means and circuit protection are to be provided by the installer of this device.

SEQUENCE OF OPERATION OF MAC-3 INTERLOCKED WITH 24 VAC & 115 VAC APPLIANCE CONTROL CIRCUITS

The circuit board of the MAC-3 is designed for a simple three wire interlock with up to three separate burners. Upon a call for heat the "hot" leg of the burner circuit is intercepted and routed to the MAC-3 terminal strip. The MAC-3 is activated, the power venter, draft inducer, IN-FORCER or damper starts. The proving switch makes and the intercepted "hot" leg is returned to the burner circuit, allowing the burner to fire. Plug-in relays must be purchased separately depending on control system voltage of appliance.


Use Tjernlund part # 950-1040 relay For 24 VAC control systems

Use Tjernlund part # 950-0480 relay For 115 VAC control systems

ELECTRICAL SPECIFICATIONS TABLE

▪ SYSTEM POWER REQUIREMENTS	L1, L2	10 AMPS @ 115 VAC
	J1, J2, J3	1 VA MIN. TERMINALS 1,2
▪ POWER SWITCHING CAPACITY	J1, J2, J3	7 AMPS EACH, TERMINALS 1,3
	OUTPUTS H,N & MOTOR 1,2	9 AMPS TOTAL @ 115 VAC MAX.
USER-PROVIDED SWITCHING LIMITATION MINIMUMS	OPT LIMIT & AUX LIMIT 9,0	10 AMPS @ 115 VAC MIN.
	AUX SWITCHING	10 AMPS @ 115 VAC MIN.
	OUTPUT H,PH AUX PROVER 3,4	1.0 AMPS @ 115 VAC MIN.
* DO NOT POWER INDUCERS, VENTERS OR AIR INTAKES IN EXCESS OF 10 AMPS TOTAL LOAD. AN ISOLATION RELAY IS NEEDED FOR LOADS ABOVE 10 AMPS. SEE MANUFACTURER'S INSTRUCTIONS.		


MAC-3 CIRCUIT BOARD FEATURES

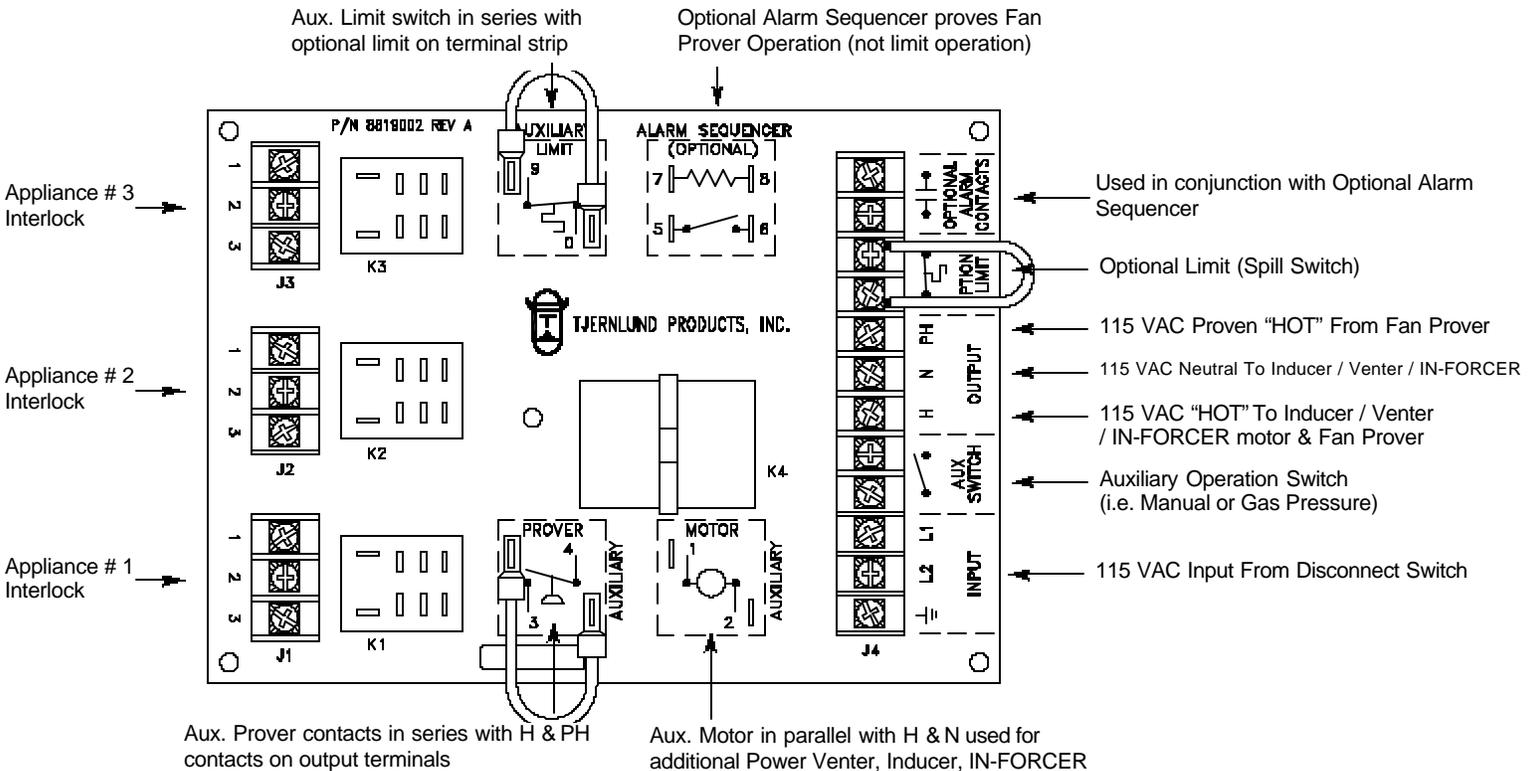


OUTPUT POWER VENTER, DRAFT INDUCER, IN-FORCER & DAMPER WIRING WITH THE MAC-3

When wiring the MAC-3 with a Tjernlund Power Venter without a post-purge Timer/Relay only the Fan Proving Switch and motor leads are utilized for wiring. If you are wiring with a post purge Timer/Relay see wiring on bottom of page 2. Our HSUL Series, GPAK-J/1 Series and Commercial HS-3,4,5 Series utilize our part # 950-1040 relays which can be plugged into the MAC-3 for 24V control systems. The HSUL-Series, GPAK-J/1 Series and model HS-5 include one part # 950-1040 relay. The models HS-3 and HS-4 include two part # 950-1040 relays.


MAC-3 WIRED WITH A TJERNLUND POWER VENTER, DRAFT INDUCER, IN-FORCER OR 115V DAMPER WITHOUT A POST-PURGE (VENTER MOTOR LESS THAN 9 AMPS)

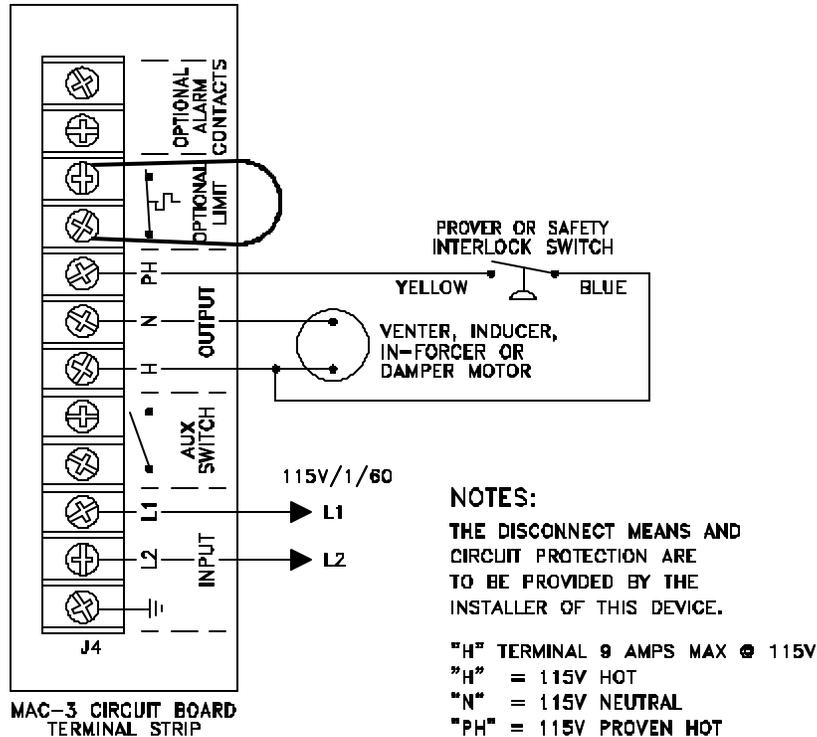


MAC-3 WIRED WITH A TJERNLUND HST, GPAK-T SERIES POWER VENTER OR DRAFT INDUCER WITH A 950-1067 POST-PURGE TIMER/RELAY (VENTER MOTOR LESS THAN 4.4 AMPS)

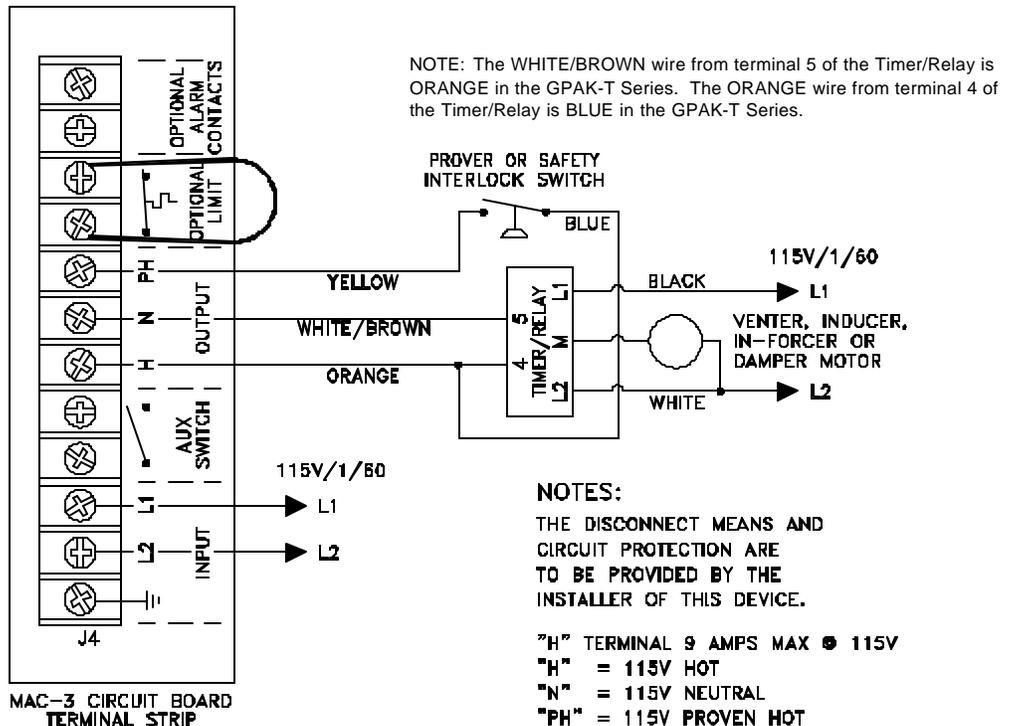

MAC-3 WIRED WITH A TJERNLUND MODEL SS1 OR SS2 SIDESHOT® VENT SYSTEM

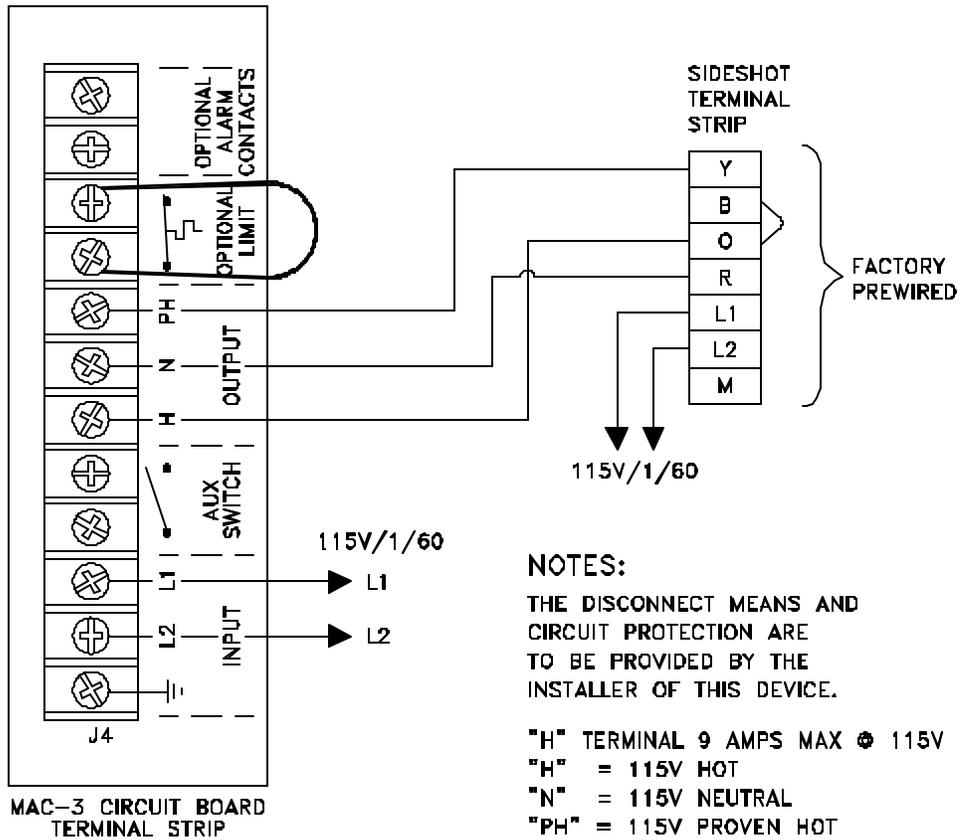

MAC-3 WIRED WITH A POWER VENTER, DRAFT INDUCER OR IN-FORCER WITH A MOTOR GREATER THAN 9 AMPS
TJERNLUND MODELS INCLUDE THE XL DRAFT INDUCER, HS-5 POWER VENTER & PAI-7 IN-FORCER

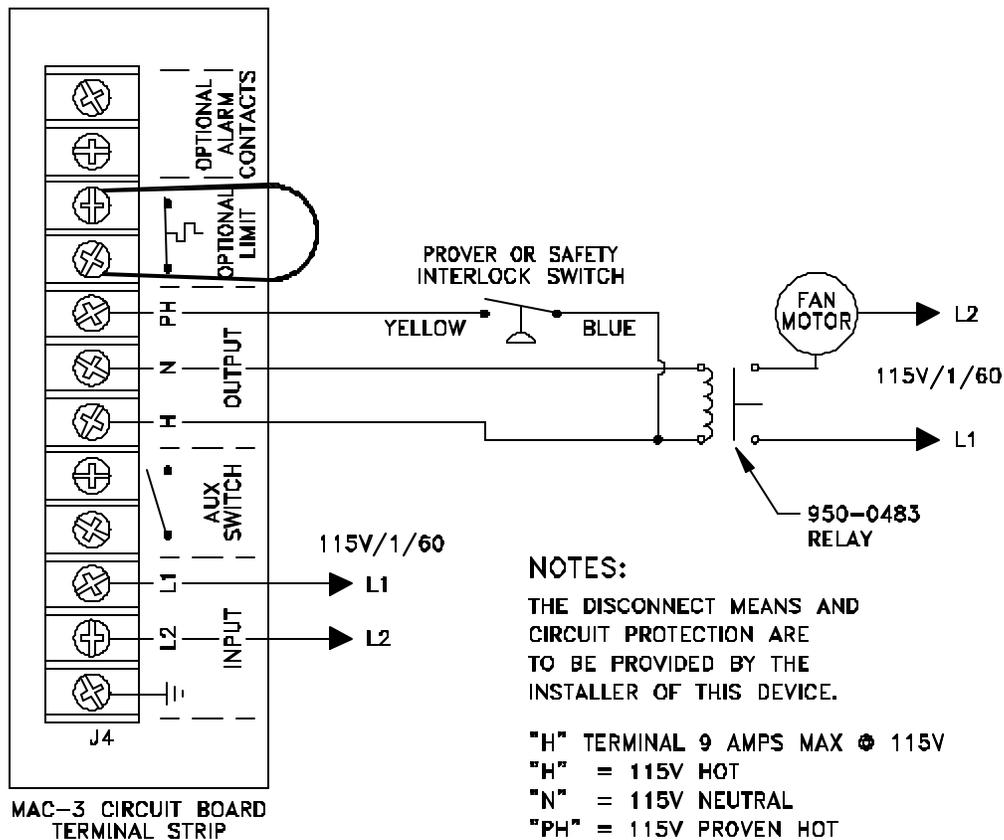


BURNER INPUT WIRING WITH THE MAC-3

The diagrams included with these instructions depict two burners interlocked with the MAC-3. To wire a third burner to the MAC-3, purchase the proper control voltage plug-in relay and wire according to the diagram suited for that application.


Use Tjernlund part # 950-1040 relay For 24 VAC control systems

Use Tjernlund part # 950-0480 relay For 115 VAC control systems


MAC-3 WIRED WITH UP TO THREE 24V GAS APPLIANCES

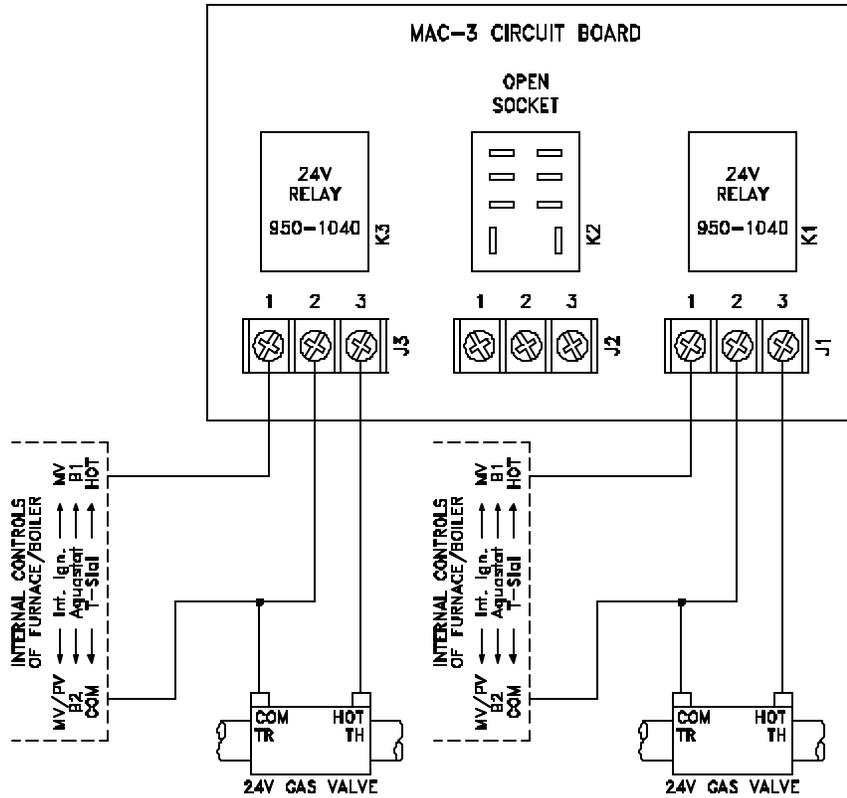


MAC-3 WIRED WITH UP TO THREE 115 VOLT GAS APPLIANCES

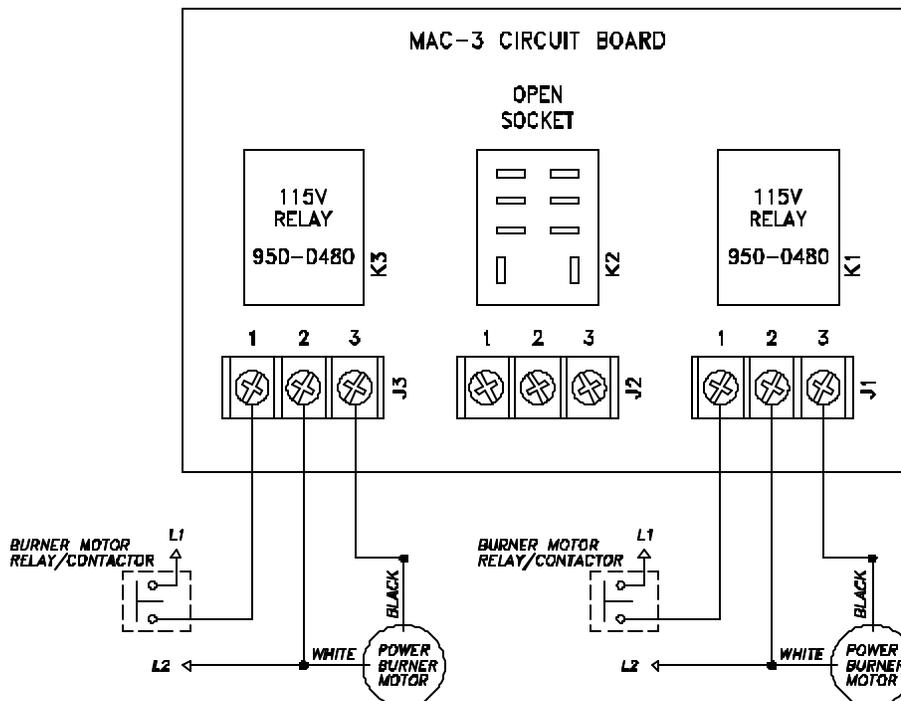


MAC-3 WIRED WITH UP TO THREE OIL BURNERS WITH R8184G CONTROLS - BURNER MOTOR LESS THAN 7 AMPS

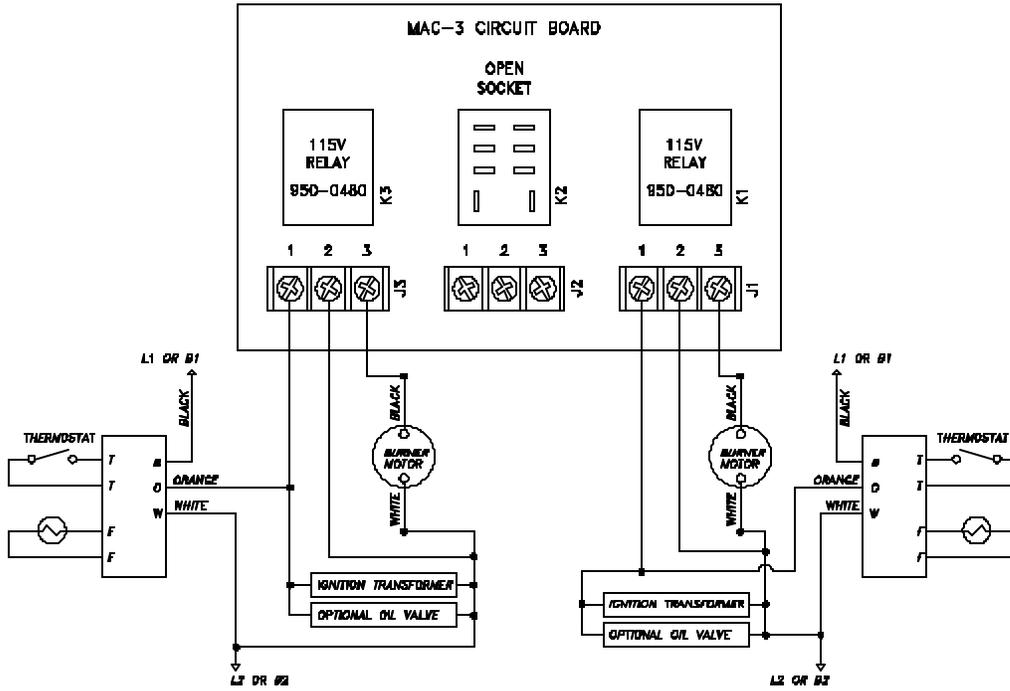


MAC-3 WIRED WITH UP TO FIVE 24V GAS BURNERS AND ONE POWER VENTER, DRAFT INDUCER OR IN-FORCER

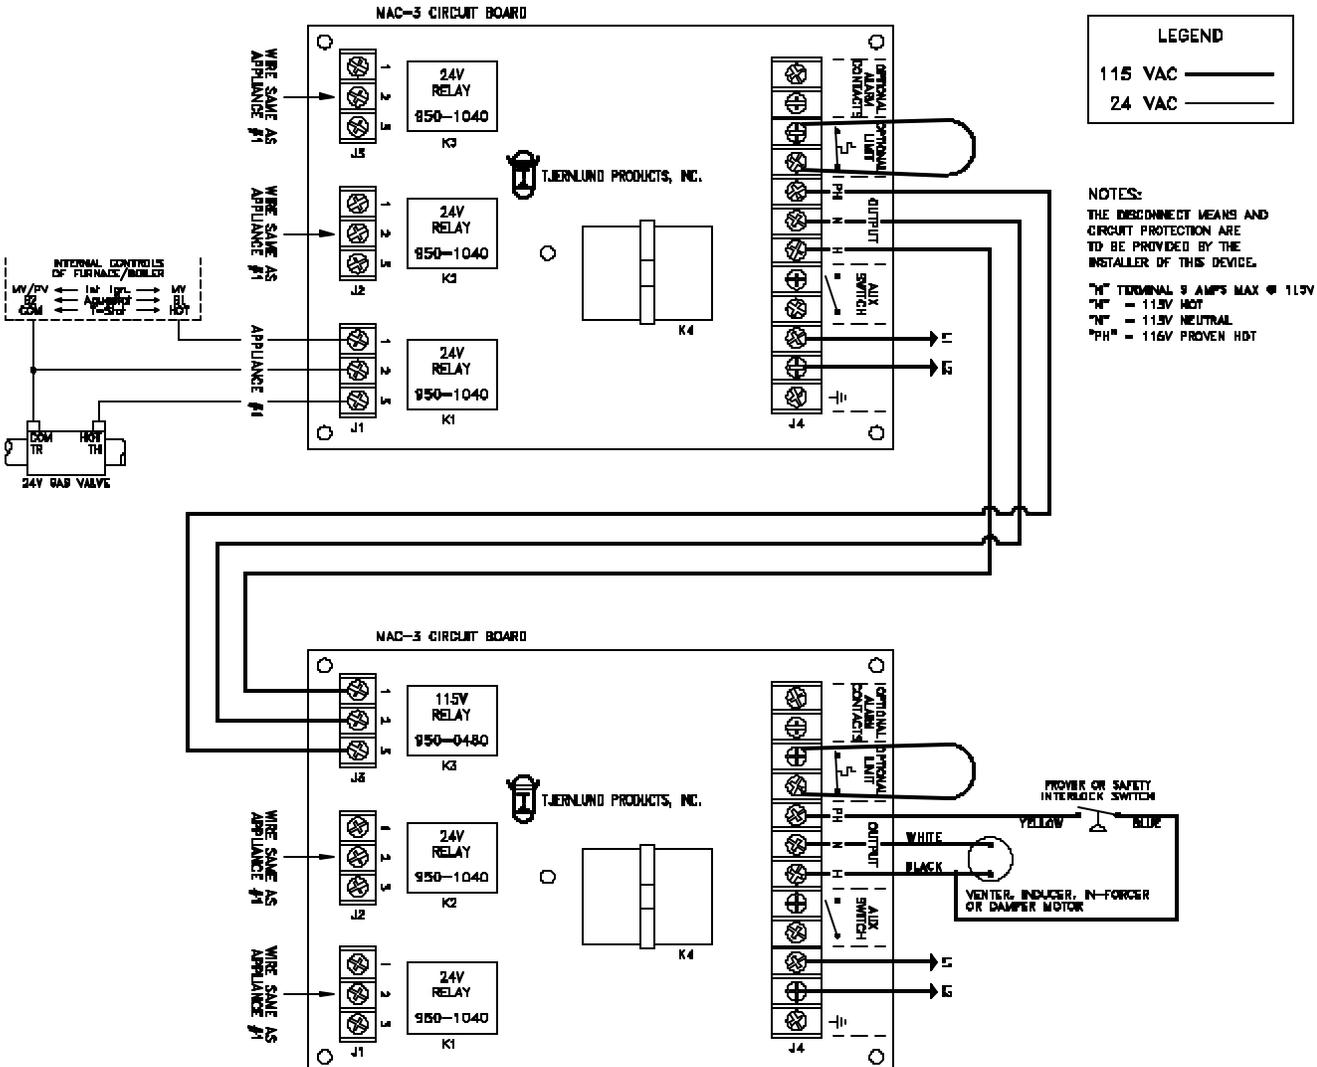

MAC-3 WIRED WITH A POWER VENTER OR DRAFT INDUCER AND A COMMERCIAL IN-FORCER

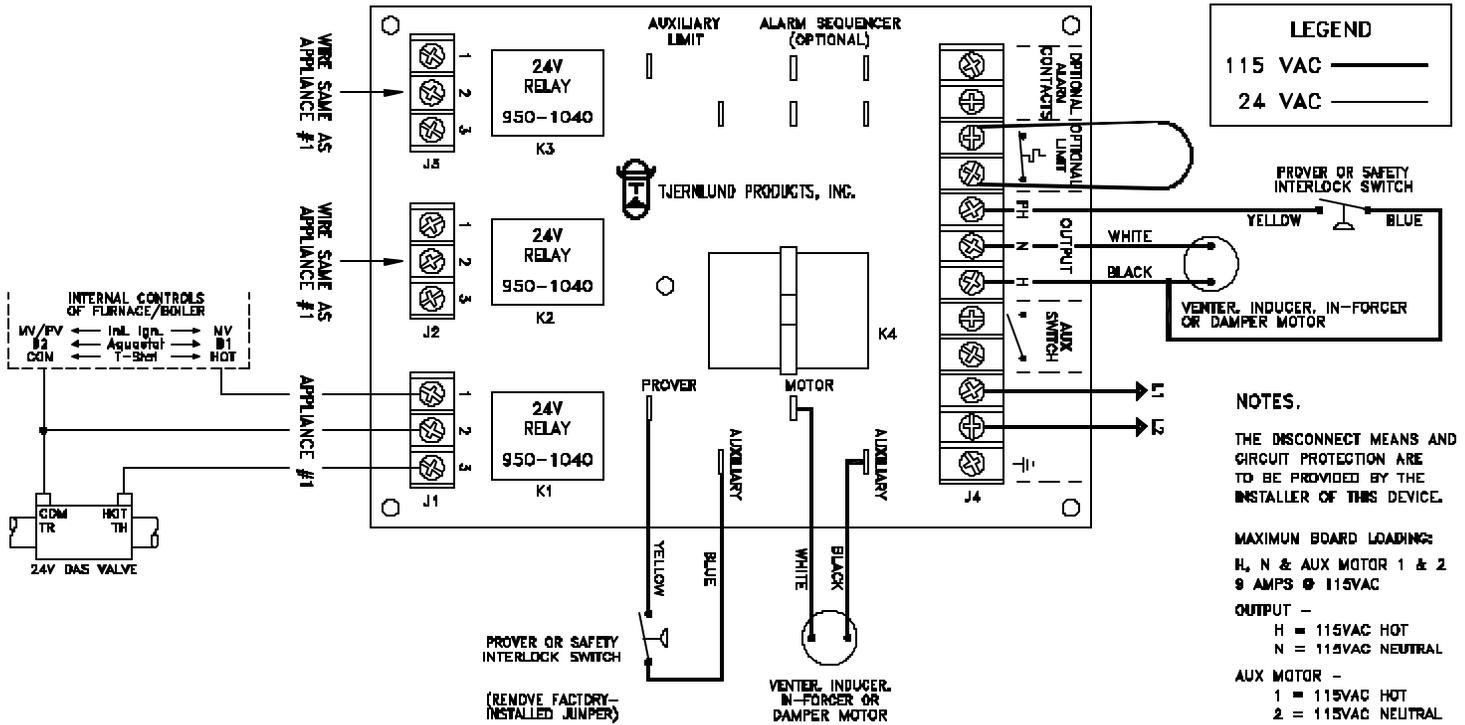

MAC-3 CIRCUIT BOARD WIRING SCHEMATIC

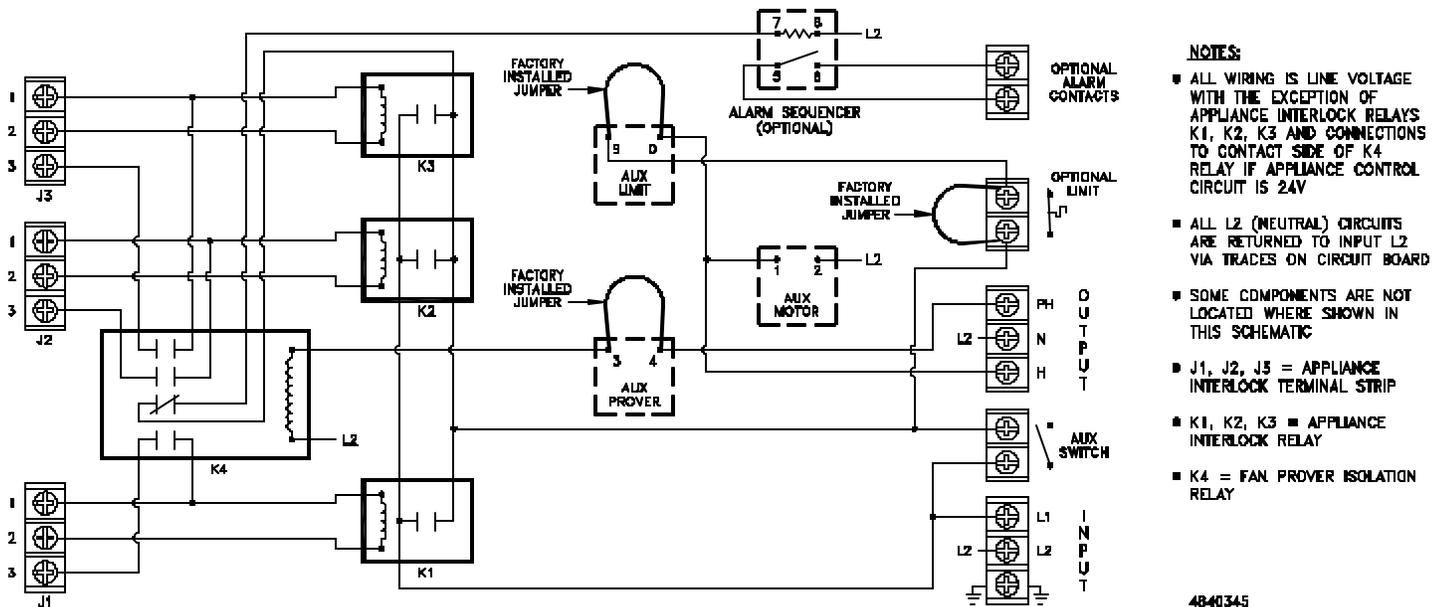

LIMITED PARTS WARRANTY AND CLAIM PROCEDURE

Tjernlund Products, Inc. warrants the components of its products for one year from date of installation. This warranty covers defects in material and workmanship. This warranty does not cover normal maintenance, transportation or installation charges for replacement parts or any other service calls or repairs. Products that are tampered with, damaged, or defective due to malfunctioning appliances are not covered under this warranty. This warranty DOES NOT cover the complete MAC-3 if it is operative, except for the defective part.

Tjernlund Products, Inc. will issue credit or provide a free part to replace one that becomes defective during the one year warranty period. If the part is over 18 months old, proof of date of the installation in the form of the contractor sales/installation receipt is necessary to prove the unit has been in service for under one year. All receipts should include the date code of the MAC-3 to ensure that the defective component corresponds with the complete unit. This will help preclude possible credit refusal.

- 1.) If unable to determine faulty component, contact your Tjernlund distributor or Tjernlund Products Technical Customer Service Department at 1-800-255-4208 for troubleshooting assistance.
- 2.) After the faulty component is determined, return it to your Tjernlund distributor for replacement. Please include MAC-3 date code component was taken from. If MAC-3 date code is older than 18 months you will need to provide a copy of the original installation receipt to your distributor. Credit or replacement will only be issued to a Tjernlund distributor after the defective part has been returned prepaid to Tjernlund.

REPLACEMENT PARTS COVERED BY WARRANTY

24 Volt Relay	950-1040
115 Volt Relay	950-0480
4PDT Isolation Relay	950-0481
Alarm Sequencer	950-0478
Circuit Board only	950-0484

WHAT IS NOT COVERED

Product installed contrary to our installation instructions

Product that has been altered, neglected or misused

Product that has been wired incorrectly

Any freight charges related to the return of the defective part

Any labor charges related to evaluating and replacing the defective part

TJERNLUND LIMITED ONE YEAR WARRANTY

Tjernlund Products, Inc. warrants to the original purchaser of this product that the product will be free from defects due to faulty material or workmanship for a period of (1) year from the date of original purchase or delivery to the original purchaser, whichever is earlier. Remedies under this warranty are limited to repairing or replacing, at our option, any product which shall, within the above stated warranty period, be returned to Tjernlund Products, Inc. at the address listed below, postage prepaid. THERE ARE NO WARRANTIES WHICH EXTEND BEYOND THE DESCRIPTION ON THE FACE HEREOF, AND TJERNLUND PRODUCTS, INC. EXPRESSLY DISCLAIMS LIABILITY FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM THE USE OF THIS PRODUCT. THIS WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES AND NO AGENT IS AUTHORIZED TO ASSUME FOR US ANY LIABILITY ADDITIONAL TO THOSE SET FORTH IN THIS LIMITED WARRANTY. IMPLIED WARRANTIES ARE LIMITED TO THE STATED DURATION OF THIS LIMITED WARRANTY. Some states do not allow limitation on how long an implied warranty lasts, so that limitation may may not apply to you. In addition, some states do not allow the exclusion or limitation of incidental or consequential damages, so that above limitation or exclusion may not apply to you. This warranty gives you specific legal rights and you may also have other rights which may vary from state to state. Send all inquires or products requiring warranty work to Tjernlund Products, Inc. 1601 9th Street, White Bear Lake, MN 55110-6794. Phone (651) 426-2993 • (800) 255-4208 • Fax (651) 426-9547.